

Installation guide

# Shut-off ball valve

## Type GBC 6s to GBC 79s

009R9518

009R9518

**Refrigerants:**

R134a, R22/R407C, R404A/R507, R407A, R407F, R410A, R448A, R449A, R452A, R513A, R450A, R1234ze  
 GBC 6s - GBC 25s can also be used for: R32

For complete list of approved refrigerants, go to <http://products.danfoss.com/all-products/>

Applicable to all common non-flammable refrigerants, excluding R717 and to noncorrosive gases/liquids dependent on sealing material compatibility.  
 The design pressure shall not be less than the value outlined in Section 9.2 of ANSI/ASHRAE 15 for the refrigerant used in the system.


**Temperature range:**

GBC 6s – GBC 42s: -40 °C – 150 °C / -40 °F – 300 °F  
 GBC 54s – GBC 79s: -40 °C – 121 °C / -40 °F – 250 °F

**Max. working pressure:**


PS/MWP = 45 bar / 650 psig

**1** Remove cap and access cap (if present)

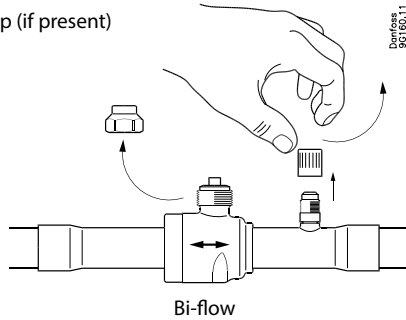


**2** Opening valve

Danfoss  
9G162.13

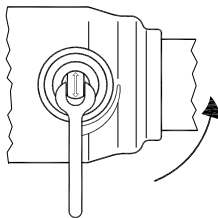


**Max. Torque**

Valve size	Nm	ft-lbs
6s - 22s	7	5.2
25s - 28s	17	12.6
32s - 35s	20	14.8
38s - 54s	34	25.2
67s - 79s RP	34	25.2
67s - 79s	60	44.2

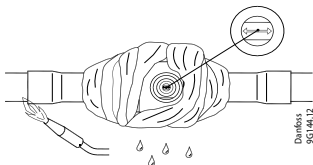


OPEN position

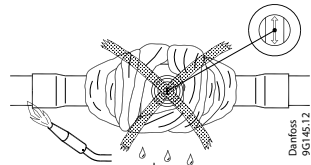


CLOSED position


### 3 Brazing

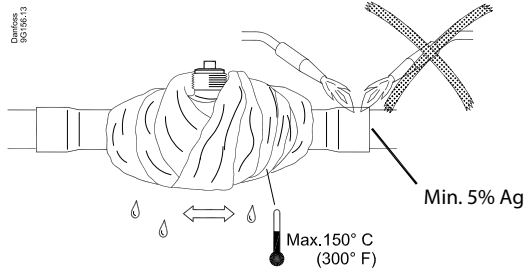

### 4 Install Schrader valve and cap (if present)

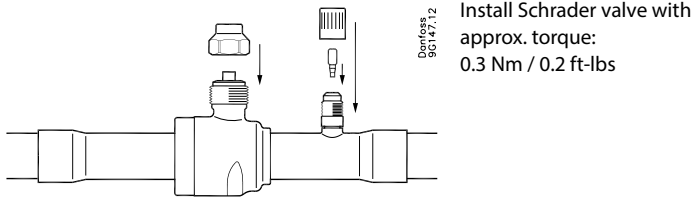



### 5 Tighten cap

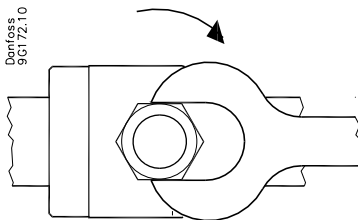


Tighten the cap with approx. torque

Max. Torque


Valve size	Nm	ft-lbs
6s - 22s	15	11.0
25s - 35s	20	14.8
42s - 79s	32	23.6

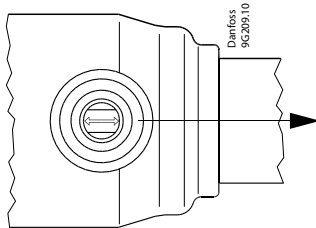

Fully closed



Fully open



Ball valve must always be in either FULLY OPEN or FULLY CLOSED position